

 
# FLOWSTOP

## USER'S MANUAL

### Your equipment

#### Your FlowStop

1. A handle
2. Top cushion
3. Bottom chamber
4. Instructions
5. Two height marker bands
6. Two valves
7. QR code

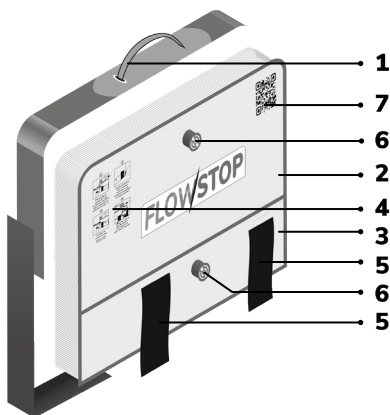

#### The pump

8. Inflation device
9. Hose
10. Pressure gauge
11. Outlet «to inflate» INF
12. Outlet «to deflate» DEF

# Installing the pump

## Step 1 : Connect your hose

- On the top of the pump tube, there are two outlets : INF for Inflate (to inflate your device) and DEF for Deflate (to deflate your device).
- Connect your hose to the INF outlet

## Step 2 : Focus your efforts

- At the top of the pump tube there is a cap that allows you to gauge your efforts during inflation. As long as it is in place, you can push and pull as much air into your FlowStop.
- When the double action is too difficult, you can remove the cap so that you only put air in by pushing.



### Video tutorial

> Go on : [www.flowstop.co/en](http://www.flowstop.co/en)

> Section : FAQs

> Tutorial : How to install a FlowStop pump?

## How to proceed




Over 1.5m wide, it is strongly recommended that two people do the installation.

## Step 1 : Pre-inflation of the top chamber



We recommend inflating the FlowStop empty for the first use.

 
- First, press the central plunger of the top chamber valve so that it is in the up position.
- Screw on the pump hose.
- Inflate the cushion sufficiently to shape it so that it can be put in place more easily.

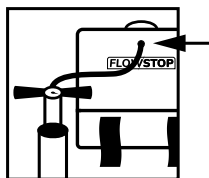

Pre-inflate the top chamber.

## Step 2 : Position your FlowStop

 - Place your cushion at the opening to be the opening to be protected.
- Once installed, make sure the cushion cushion is perfectly positioned using the two height marker strips. (see paragraph 1<sup>st</sup> «Your equipment! »).
- To do this, it must be perfectly level with the level with the ground in order to optimise protection and therefore the watertightness of your device.

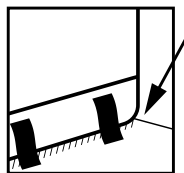

Position the Flowstop in the opening and finish inflating the top chamber.




Be careful when placing it in your opening and do not hesitate to force it in.

### Step 3 : Inflating the top chamber

 - Inflate the top chamber completely with the pump (recommended minimum pressure 0.8 bar). To ensure this, you will find a pressure gauge on the top of your pump.
- Once the top chamber is inflated, unscrew the hose and close it with the protective cap.

### Step 4: Inflating the bottom chamber

- As with the top chamber, remember to press the central plunger of the valve before inflation so that it pops out
- Screw on the hose, and inflate the bottom chamber, which will press against the floor and provide maximum sealing.
- Once the bottom chamber is inflated, unscrew the hose and close with the protective cap.

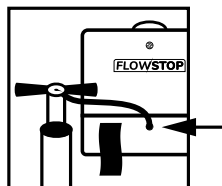

Pre-inflate the bottom chamber.



#### Video tutorial

- > Go on : [www.flowstop.co/en](http://www.flowstop.co/en)
- > Section : FAQs
- > Tutorial : How to set up and install a FlowStop?

## Once the flood has passed

### Step 1 : Deflate the top chamber

- First, remove the protective cap.
- Press the valve continuously until the cushion is sufficiently deflated. cushion is sufficiently deflated.

### Step 2 : Deflate the bottom chamber

- Repeat **Step 1** for the bottom chamber.

### Step 3 : Clean the FlowStop

- You can clean the FlowStop with clear water before storage.



You can use the pump to optimally deflate your FlowStop. To do this, connect the hose to the DEF mode of your pump.



#### Video tutorial

- > Go on : [www.flowstop.co/en](http://www.flowstop.co/en)
- > Section : FAQs
- > Tutorial : How to deflate and store my FlowStop?

Share your experience on  
**flowstop.co/en**



Follow us on    